

EUREKA UPRIGHTS

1400 Series

UPPER CASTING ASSEMBLY

Models: 1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D/E/G/H/J/K, 1407/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/E/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429A/D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A, /B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1490A, 1495A

- 13.....E-1260014.....Lens, 1425A/B,1452F,1454A,1455A,1456A,
1458A/B/D/E/F,1459A,1463A,1490A
- 12.....E-374753.....Lens, 1428D
- 14.....E-126018.....Lens, 1447B, 1469A,1473A/B,1489A/B
- 12.....N/ALens, 1450A,1457B,1466A,1485B/D
- 14.....E-126018.....Lens, 1462A
- E-120905.....Lens Housing, for models using E-22285 lens
- 15.....E-36525.....Light Shield, 1458F,1490A
- 16.....E-35958AHeadlamp Socket Assy, 1427E,1428B/D,1436A,
1447B,1450A,1452F,1457B,1458F,1462A,
1466A,1469A,1470D,1471A/B,1473A/B,
1485A/B/D,1486A,1489A/B,1490A
- 17.....E-40009ABulb, 1427E,1428B/D,1436A,1447B,1450A
1452F,1457B,1458F,1462A,1466A,1469A,
1470D,1471A/B,1473A/B,1485A/B/D,1486A,
1489A/B,1490A
- 18.....E-601921.....Wire Nut
- 19.....E-37020.....Motor Shield, 1402D,1425G,1429D,1431D,
1432A,1437A,1442A,1443A/B
- 20.....E-5323813.....Screw, motor
- 21.....E-5323814.....Screw, motor mount
- 22.....E-533497.....Motor Assembly, 4 amp, 1 speed, common
- 22.....E-533493.....Motor Assembly, 1450A,1457B,1462A,1466A,
1469A,1471B,1473A,1486A,1489A/B,1490A
- 22.....N/AMotor Assembly, 1489AM/BM
- 23.....E-30517.....Motor Seal Gasket
- 24.....E-24834A3Foot Pedal
- 25.....E-53097.....Spring, foot pedal
- 26.....E-5323814.....Screw, clamp
- 27.....E-53140.....Clamp & Screw Assy
- E-48642.....Set Screw
- E-47754AAdjustment Clamp
- 28.....N/AMotor Fan Shield, 1452F,1458F,1495A
- 28.....N/AMotor Fan Shield, 1462A,1489A
- 28.....E-36471AMotor Fan Shield, 1469A
- 29.....N/AAir Deflector Assy
- 30.....N/AAir Deflector Assy, 1447B,1473A,1489AM/B/BM,
1495A
- 31.....E-49358.....Air Deflector Assy, 1452F,1458F,1462A
- 32.....N/ABase Assembly, frost white, common
- 32.....E-550483.....Base Assembly, 1402D
- 32.....E-4919127.....Base Assembly, 1427E,1458F,1473A
- 32.....E-5345621.....Base Assembly, 1432D/E/F,1435B/D,1442D,
1443B/D,1485D
- 32.....N/ABase Assembly, 1489B
- 32.....N/ABase Assembly, 1495A
- E-24964A1Cam, right side
- E-24965A1Cam, left side
- E-53118.....Rivet
- E-53133.....Washer
- 33.....E-53117.....Hood Spring, 10 pk, 1402D,1425G,1427E,
1428B/D,1429D,1431D,1432A,1436A,1437A,
1442A,1443A,1447B,1452F,1458F,1462A,
1469A,1470D,1471A/B,1473A,1473B,1485A/B,
1486A,1489A/AM/B/BM,1490A,1495A
- 34.....E-270911Switch Button, 1432D/E/F,1435D
- 35.....E-137385.....Switch, step-on, flat side, late models
- 35.....E-3640913.....Switch, step-on, 13" leads
- 35.....E-3640917.....Switch, step-on, 1489AM/BM
- E-55446.....Switch Nut
- 36.....E-37989.....Switch Clip, 1432D/E/F,1435B/D,1442D,1443B/D
- 37.....E-375901.....Bushing Bracket, 1432D/E,1435B/D
- 38.....E-55015.....Wire Clip
- 39.....E-37676ASeparator, 1432B/D/E/F,1435A/B/D,1439A,
1442B/D,1443D,1457B,1466A/B,1485D
- 40.....E-532287.....Bag Screw
- 41.....E-36263.....Wheel Cover, 1402D,1425G,1429D,1431D,
1432A/B/D/E/F,1435A/B/D,1437A,1439A,
1442A/B/D,1443A/B/D,1450A,1457B,1466A,
1473B,1485B/D,1489B/BM,1490A,1495A
- E-532155.....Screw, hood to base, 1432B/D/E/F,1435A/B/D,
1439A,1442B/D,1443B/D,1450A,1457B,
1466A,1485B/D
- E-53124.....Distribulator Spring, right side, 5 pk
- E-53116.....Distribulator Spring, left side, 5 pk


EUREKA UPRIGHTS

1400 Series

LOWER CASTING ASSEMBLY

Models: 1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D, 1406D/E/G/H/J/K, 1407A/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A/B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A/B, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1495A

- 1.....E-369994.....Furniture Guard, frost white
- 1.....E-10180M10.....Furniture Guard, off-white, 1414A/B,1418A/B, 1420A,1421A,1422A,1424A/B
- 1.....N/AFurniture Guard, red pepper, 1432A/B/D/E/F, 1470D,1490AT
- 1.....E-3699933.....Furniture Guard, red pepper, 1435A/B/D,1436A, 1442A/B/D,1443A/B/D
- 1.....N/AFurniture Guard, white w/ green stripe, 1440A, 1441A,1444A,1446A,1446B,1447A,1448A, 1453A,1453B,1454A,1455A,1457A,1458A, 1463A
- E-42952.....Bumper Clip, for E-10180M10 furniture guard
- E-532282.....Screw, bumper clip, 10pk
- 2.....E-47562.....Rear Axle
- 3.....E-530762.....Axle Spring, 5 pk
- 3.....N/AAxle Spring, 1407A,1414A,1415A/AG/B/BG, 1416A/AS,1417A,1418A,1419A,1420A, 1421A,1422A1423A,1424A
- 4.....E-53111Axle Clip, 5 pk
- 5.....E-5323811Screw, clip
- 6.....N/AFront Wheel, grey, flat inside, early models
- 6.....E-35859A1Front Wheel, grey, scouped inside, late models
- E-53110.....Washer, front wheel
- E-53110.....Washer, front wheel, 1431D
- 7.....N/AFront Axle
- 7.....E-36186.....Front Axle, 1402D
- 7.....E-35947AFront Axle, 1423E/F, 1435A/B/D
- 8.....E-30563ABelt, sold each
- 8.....E-52100.....Belt, 2 pack
- 9.....E-358582.....Rear Wheel, grey
- 10.....E-533501.....Brush Roll, wood, hex end, 12"
- E-541041.....Brush Roll, 1432D/E/F,1435D
- E-533981.....Brush Roll, VG2, 1450A,1452F,1469A, 1489A/B/BM,1490AT,1495A
- 11.....E-465384.....Foam Tape
- 12.....E-25359BBottom Plate, w/ hooks, early models
- 12.....E-259221.....Bottom Plate, w/ slots, new style

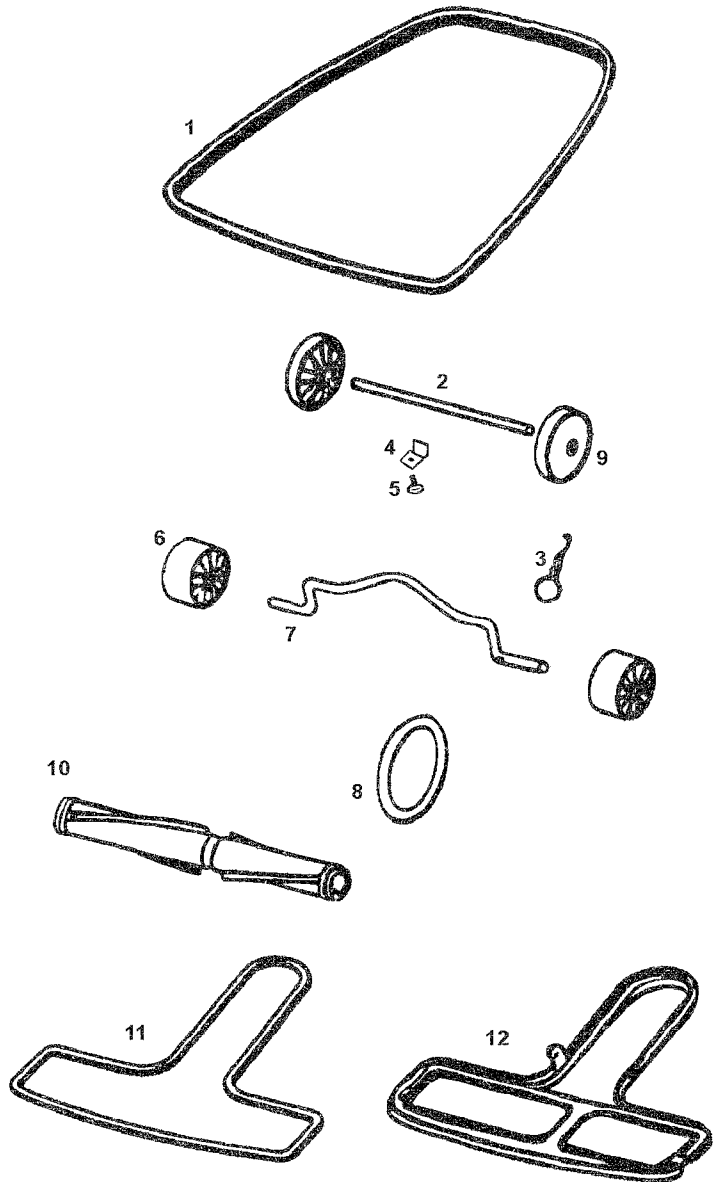

EUREKA UPRIGHTS


1400 Series

HANDLE ASSEMBLY

Models: 1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D, 1406D/E/G/H/J/K, 1407A/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A/B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A/B, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1495A

SECTION A

A

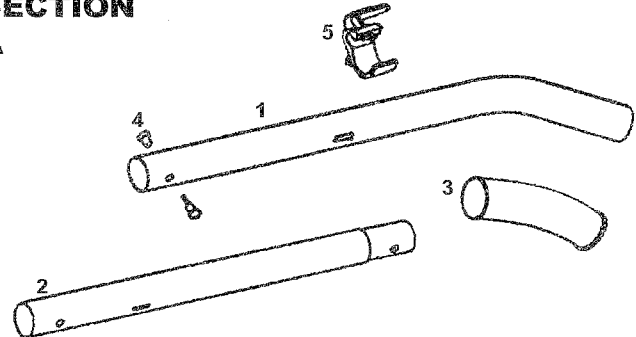


SECTION A

- 1.....E-2532920.....Upper Handle Assy, chrome
- 2.....E-126378.....Lower Handle Assy, plated
- 3.....E-352938.....Handle Grip
- 4.....E-531981.....Handle Screw Assy, 6pk
- 5.....E-537472.....Cord Retainer Set, upper/lower, black
- 5.....E-369652.....Cord Retainer, upper, black, quik release
- E-344085.....Handle Cap

SECTION B

B

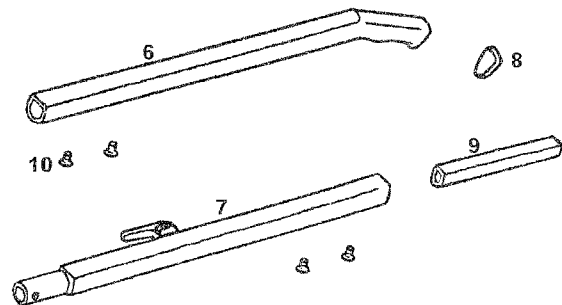

SECTION B


- 6.....E-270362.....Upper Handle Assy
- 7.....E-016812.....Lower Handle Assy
- 8.....N/A.....Handle Cap
- 9.....E-266591.....Handle Connector
- 10.....E-535365.....Snap Pin, 10pk

SECTION C

- 11.....E-259893.....Upper Handle Assy
- 12.....E-369842.....Lower Handle Assy,
- 13.....E-368735.....Handle Cap, black
- 14.....E-530801.....Snap Pin, 5pk
- 15.....N/A.....Handle Tube Connector

SECTION C

C

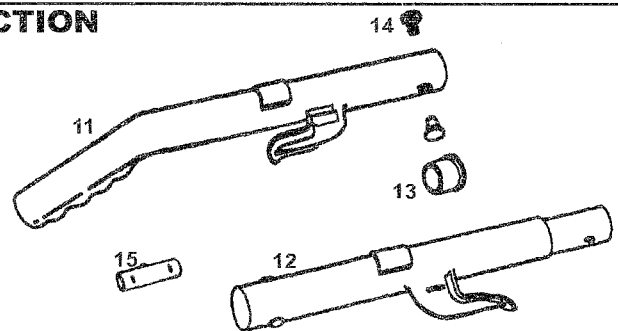

ALL MODELS

- 16.....E-544151.....Cord, 20ft, 6", white, w/ bushing & sleeve
- 16.....N/A.....Cord, 20ft, 6", white
- 16.....E-273821.....Cord, 21ft, black
- 16.....NLA.....Cord, 25ft, 6", black
- E-360972.....Cord Sleeve
- 17.....E-540921.....Handle Socket Assy, painted, w/ lever
- 17.....E-540922.....Handle Socket Assy, chrome, w/ lever
- 17.....E-271372SV.....Handle Socket Only, chrome, 1495A
- 18.....E-531981.....Screw & Nut Assy, 6pk
- 19.....E-532135.....Nut,
- 20.....E-53145.....Bolt,
- 21.....E-5323813.....Screw,
- E-37157.....Handle Socket Shield, 1432D/E, 1442D

