



Ref. No.	Part No.	Description
1	42272123	Recovery Tank Lid (Does not inc. its 3,4)
2	38777060	Recovery Tank Assem Comp (Inc. its 1,3,4, 88,89,90)
3	43538001	Float
4	38719043	Float Retainer
5	48437028	Scrub Module Assembly (Incl. 1 scrub pad)
6	48439003	Powered Hand Tool (Incl. lt. 7)
7	48437027	Upholstery Module Assembly
8	38433077	Solution Button - AG
9	21447255	* Screw Self Tapping
10	39458007	Handle Lever Guard
11	38434029	Control Lever - AG
12	39442044	Cord Wrap - ABU
13	38458055	Control Rod Upper - Back
14	38458056	Control Rod Upper - Front
15	21479432	* Screw Self Tapping
16	39383104	Lens Cover - R.H.
17	38421092	Indicator Knob - AG
18	37271070	Hood - AEC - F6055-900,
19	39383103	Lens Cover - L.H.
20	47173035	Lamp / Light Housing Assem.
	27313106	Lamp - (2 req'd)
21	39457016	Solution Tank Handle
22	42272002	Solution Tank Cap (Inc. item 23)
23	38784062	Gasket
24	42272134	Solution Tank Assem. (Inc. items 21 thru 27)
25	38784061	Valve Seal
26	38717009	Valve Stem
27	38312014	Spring
28	37276012	Tool Door - ACW
29	36433141	Tool Holder
30	39466039	Upper Handle Assem. (Inc. its 8 thru 14)
31	43484003	Duct Assem. (Includes item 87)
32	23149002	Screw Self Tapping
33	38458024	Turbine Actuator Arm
34	21447246	Screw Self Tapping
35	21447242	* Screw Self Tapping
36	21447020	* Screw Self Tapping
37	43582010	Hose Conversion Assembly w/Pump (includes item 64)
38	46583056	Attachment Cord
39	21447232	* Screw Self Tapping
40	36172016	Cord Retainer
41	21447217	* Screw Self Tapping
42	160017	* Retaining Ring
43	38783025	Duct Seal
44	21447072	* Screw Self Tapping
45	43191004	Turbine & Gear Assem.
46	38458059	Handle Release Pedal
47	34122024	* Motor Cover Seal
48	36131106	Trunnion Cover R.H. - AG
49	43576197	Motor Assembly - 12 Amp
50	21447020	* Screw Self Tapping
51	36131107	Trunnion Cover L.H. - AG
52	28218048	Switch
53	38458060	Switch Actuator Pedal
54	38781048	Motor Base Seal
55	38784063	Standpipe Seal
56	46526017	Lead/Tube Assembly - Power Supply
57	38522076	Rear Wheel - ADB
58	32434007	Rear Axle
59	48445011	Brush Back Assem. - L.H.
60	21447257	* Screw Self Tapping
61	48437026	Brush Block Assem.
62	48445007	Brush Back Assem. R.H.
63	42274004	Main Body Assem.
64	43582005	Pump Assembly Complete
65	21479438	* Screw Self Tapping

Ref. No.	Part No.	Description
66	43526016	Reservoir Assem.
67	21447244	Screw - Special
68	37276003	Handle Cover
69	38458033	Control Rod - Lower
70	39466044	Lower Handle
71	40309029	Service Tubing Pack
72	43436023	Hose Assem. Comp.
73	38433074	Trigger - AG
74	37276006	Wand Cover
75	21447239	* Screw Self Tapping
76	43513011	Wand / Valve Assem.
77	38312019	Spring
78	N/A	O - Ring
79	43412007	Nozzle / Valve Assem.
80	43613018	Filter Cassette & Screen Assem.
81	36131097	Hose Cover
82	21447228	* Screw - Self Tapping
83	36171032	Hose Clamp
84	21447223	* Screw-Self Tapping
85	36433107	Tool Rack (Lower)
86	36433128	Hose / Nozzle Holder (Upper)
87	38783024	Valve Duct Seal (Located on back of item 31)
88	39457017	Recovery Tank Handle
89	36153059	Latch Arm - RH
90	36153060	Latch Arm - LH
91	37196157	Motor Cover
92	37278010	PCB Cover
93	37278011	PCB Bracket
94	46851033	PCB Assembly

Items Not Illustrated

27479307	*	Wire Tie
34113004		Motor Seal
21447041	*	Screw - Tool Rack
38717013	+	Check Valve (Sol. Tank Cap)
40201171		Handle Hardware
36132003		Over Center Spring
36439001		Valve Crank Arm
38783023		Valve Tank Seal (Located on top of valve)
56518138		Owners Manual

Labels

51438009		Cleaning Mode Label
51639165		Clean Surge Label
51869062		PCB Hood Label
51638055		Handle Release Label
51855030		Agitator Speed Label
51865024		On/Off Label

Tools / Chemicals

38617028		Crevice Tool
39514001		Nozzle Clean Out Tool
40308001		Scrub Pad Poly Pack (Inc. 2 scrub pads and 1 triangular Velcro pad)
38613040		Nozzle Body
48417004		Bare Floor Cleaning Tool -
57333016		Carpet Solution - 16 oz.
40303032		Bare Floor Solution - 32 oz. -
40302032		Pre Spray Cleaner - 32 oz. -
40301064		Carpet Solution - 64 oz.
40302016		Pre Spray Cleaner w/ sprayer - 16oz.
43412003		Sprayer Only - Pre Spray Cleaner